



## Installation Phases

1

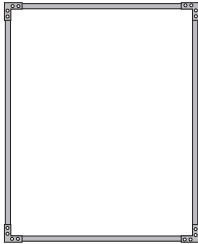


1. Place the squared section edges and the adjustable corners without tightening the screws.

2

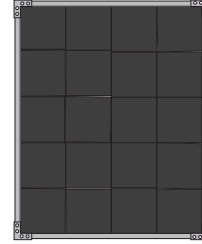


2. Lay the rubber surface.

3

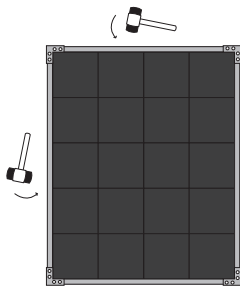


3. Use a rubber mallet to align the tiles and close the gaps.

4

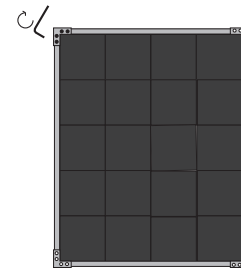


4. Fix the first corner using the provided screws and flat washers.

5

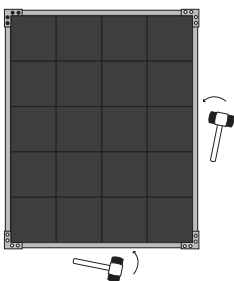


5. Use a rubber mallet to align the tiles and close the gaps

6

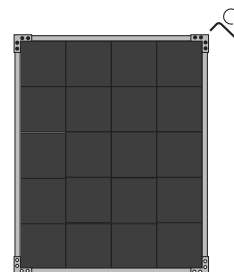


6. Fix the second corner using the provided screws and flat washers

7

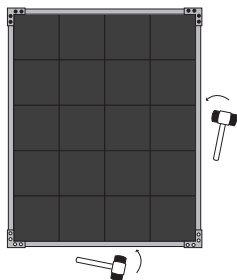


7. Use a rubber mallet to align the tiles and close the gaps.

8

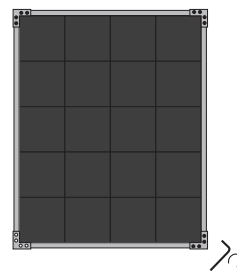


8. Check the correct positioning of the rubber tiles.

9

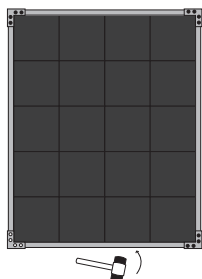


9. Eventually use a rubber mallet to align the tiles and close the gaps.

10

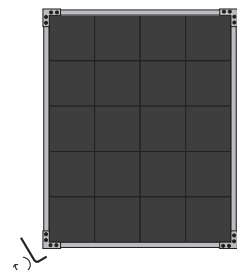


10. Fix the last two corners using the provided screws and flat washers.

### KIT CONTENTS MAGNITUDO BS1 (2550 x 2050):

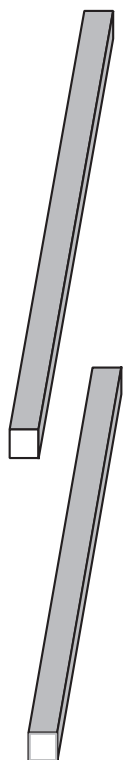


n. 2 squared section  
edges 30mm,  
thickness 2mm,  
length 2470mm

n. 2 squared section  
edges 30mm,  
thickness 2mm,  
length 1970mm



n. 4 adjustable corners  
150mm x 150mm



n. 32 screws TPS EI  
5x15 (closing with a  
3mm hex key)




n. 32 flat washers




n. 20 multilayer rub-  
ber tiles (dim.: 500 x  
500 x 30mm)

## KIT CONTENTS MAGNITUDO BM1 (3050 x 2550):

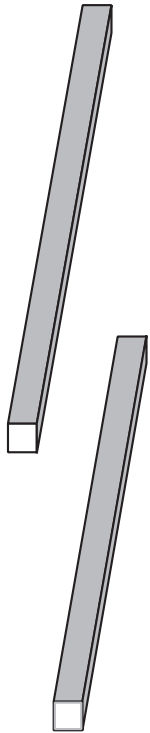


n. 2 squared section  
edges 30mm,  
thickness 2mm,  
length 2970mm

n. 2 squared section  
edges 30mm,  
thickness 2mm,  
length 2470mm




n. 4 adjustable corners  
150mm x 150mm



n. 32 screws TPS EI  
5x15 (closing with a  
3mm hex key)




n. 32 flat washers

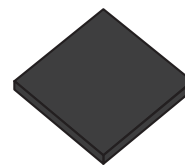


n. 30 multilayer rubber  
tiles (dim.: 500 x 500 x  
30mm)

## PACKING MAGNITUDO BS1

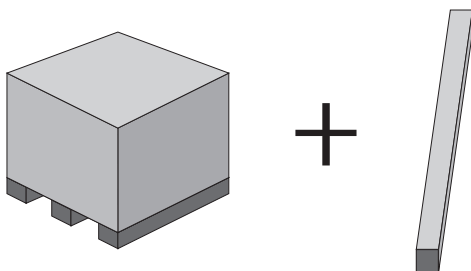


1 pallet 1050 x 1050 x 300 mm (200 Kg)  
+ 1 package 2500x100x100mm (17Kg)

## PACKING MAGNITUDO BM1

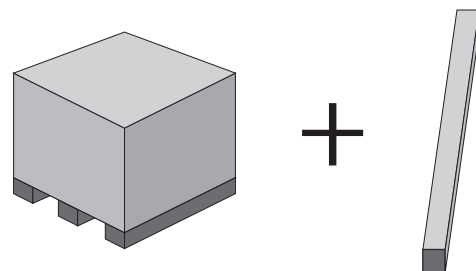


1 pallet 1050 x 1050 x 390 mm (300 kg)  
+ 1 package 3000x100x100mm (25Kg)

## TOOLS:

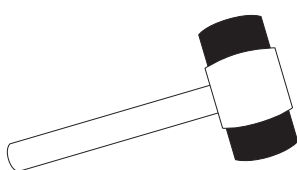

Rubber mallet



3mm hex key

Make sure you have the tools before starting the installation.