



Installation Phases

1

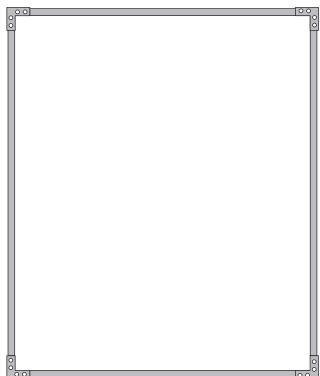


1. Place the squared section edges and the adjustable corners without tightening the screws.

2

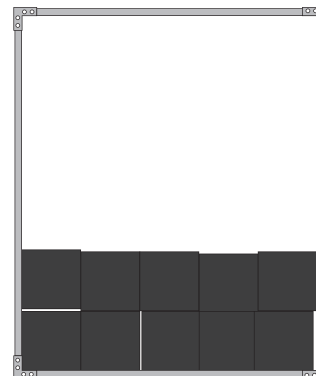


2. Lay the rubber surface in the first side.

3

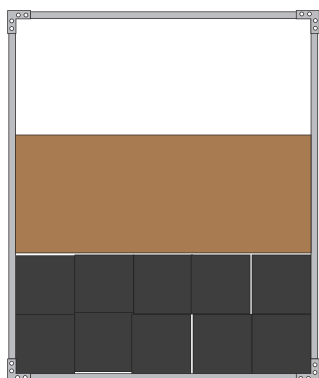


3. Lay the central wooden section.

4

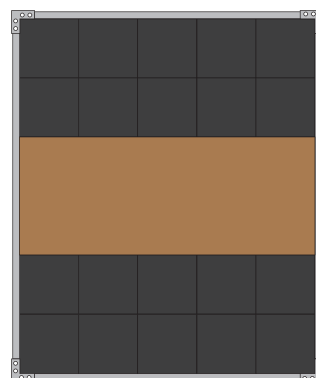


4. Lay the rubber surface in the second side.

5

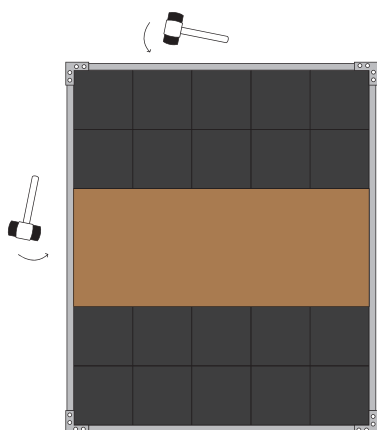


5. Use a rubber mallet to align the tiles and close the gaps.

6

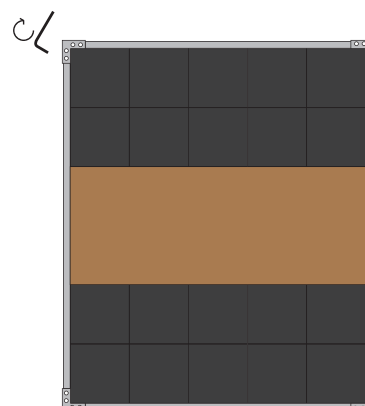


6. Fix the first corner using the provided screws and flat washers.

7

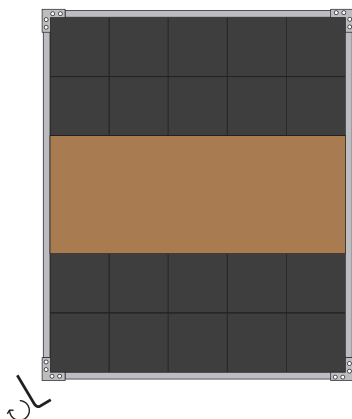


7. Repeat point 5 and 6 since the complete fixing of all corners.

8

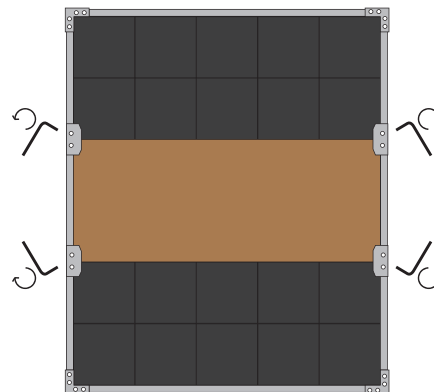


8. Fix the containment plates using the provided screws and flat washers

KIT CONTENTS DoTile[®] Fit MAGNITUDO WM1

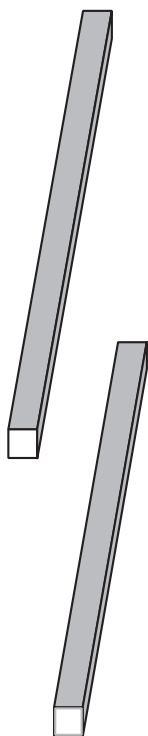


n. 2 squared section
edges 30mm,
thickness 2mm,
length 2970mm

n. 2 squared section
edges 30mm,
thickness 2mm,
length 2470mm

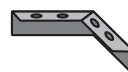


n. 4 adjustable corners
150mm x 150mm

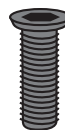



n. 40 screws TPS EI
5x15 (closing with a
3mm hex key)




n. 40 flat washers

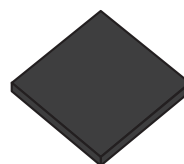


n. 20 multilayer rubber
tiles (dim.: 500 x 500 x
30mm)

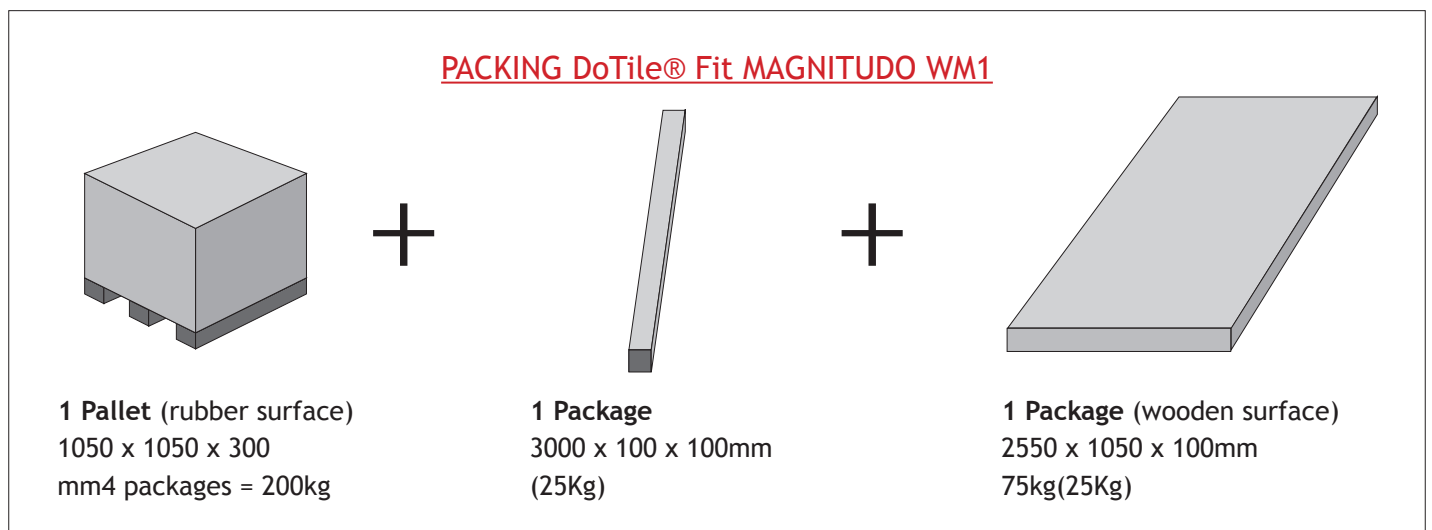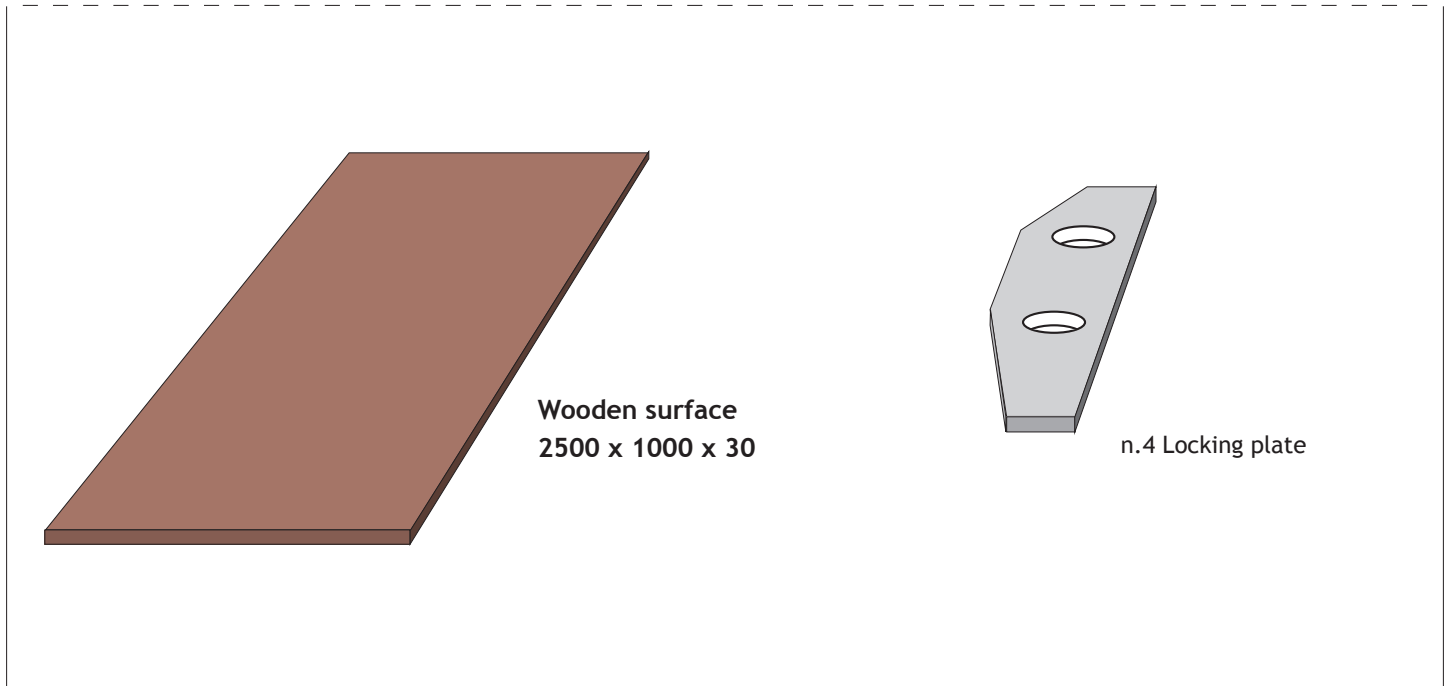

ATTREZZI UTILI:

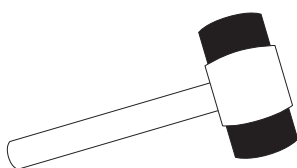

Rubber mallet

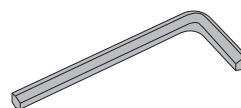

3mm hex key

Make sure you have the tools before starting the installation.